

Programming External Mini Receivers 24v & 240v

Health & Safety

CAUTION: This procedure is to be carried out by a competent person only.

If you want to use the new handset with a Seip external receiver, (usually for gate systems or alarm systems, or other non Seip devices.)



The mini receiver is usually installed inside the housing of a component or in a box. You will have to open this to access the mini receiver.

1. Take the new handset and hold it so that it is touching the mini receiver beside the LED lamp.
2. Keep any button on the handset pressed (eg shown in 1c Left) until the LED lamp on the mini receiver comes on. Now release the button of the handset.
3. Press the same button again on the hand set. The LED will now switch off. This is the button you will use for the mini receiver.

The new handset is now ready for use.