


Instructions for Coding A and C Series 433 Handsets

IMPORTANT: If you have more than one Operator in the garage, the power must be switched off the other Operator(s) while programming new handsets.

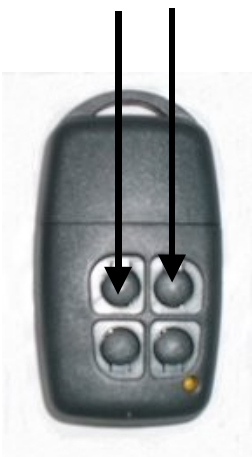

1a.

If you have one working handset and you want to code another handset from it.

1. Take a registered hand transmitter.
2. Press the two buttons shown in diagram 1a (left) simultaneously and let them go again. The decoder starts giving an acoustic signal.
3. Take the new handset and press the button you want to use for the Operator.
4. A long acoustic signal indicates that the handset has been registered successfully


The new handset is now ready for use.

Note: If you experience range problems extend the aerial outside the motor housing.

If this procedure fails – please follow the instructions below.

Health & Safety

CAUTION: This procedure is to be carried out by a competent person only.

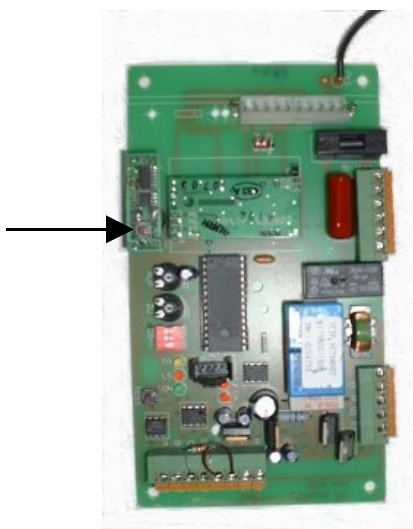

1b.

If you do not have a working handset you will need to code it directly from the Operator.

1. Open the Operator's plastic cover. (One screw opposite light cover will need to be undone.)
2. Press the button on the decoder (shown in 1b Left) for approx 3 seconds, then release, you will see a small light flashing or hear an acoustic signal.
3. Take the new handset and press the button you want to use for the Operator. This will need to be done while the small light is flashing or the acoustic signal is sounding.
4. When the handset is registered to the Operator the small light will stop flashing or the acoustic signal will stop

The new hand transmitter is now ready for use.